



ASTORIA-2 4 FT STEEL HAND SANITIZER DISPENSER STAND

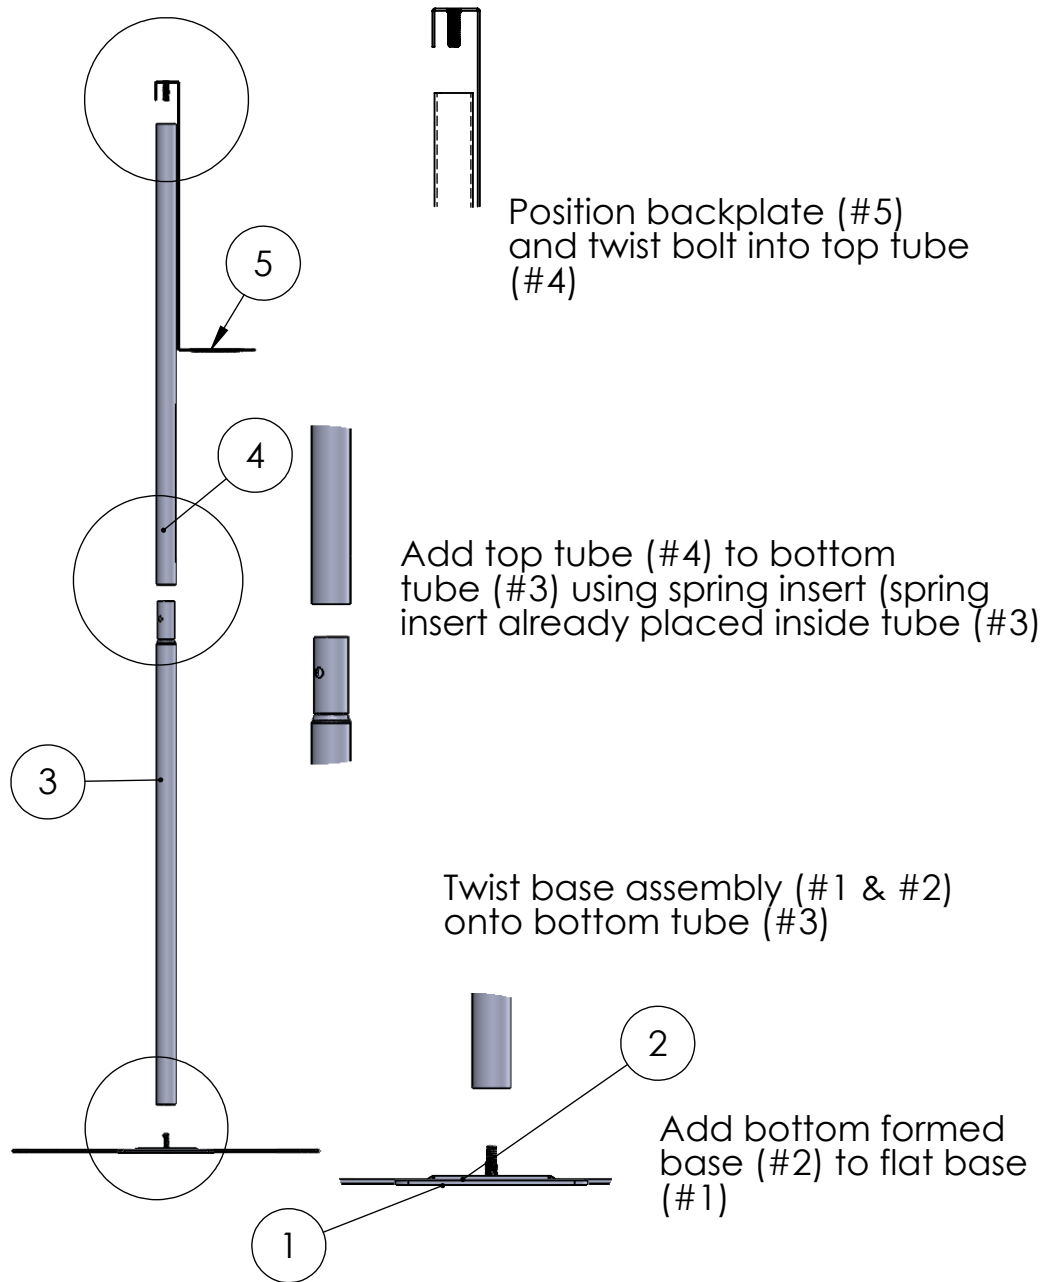

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	BaseWithStud	Flat Base	1
2	BaseWithOffset	Formed Base	1
3	BottomTube	Tube with pressed edge	1
4	TopTube	Straight tube	1
5	BackFlap14in	Backplate	1
6	Stickers	Stickers strip for dispenser	1

Be careful installing your dispenser! Many touchless dispensers need a certain amount of clearance to operate correctly. If mounted too close to the drip pan the dispenser can get false reads seeing the drip pan as a "hand" and dispense sanitizer. Be sure to test the dispenser in the install position before permanently affixing the dispenser to back with stickers!

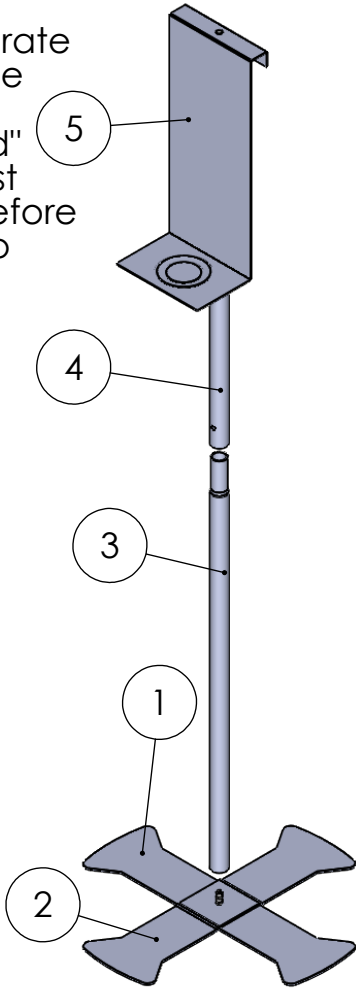

To Affix Dispenser:
To affix dispenser to the Astoria stand, please use the stickers enclosed with this stand. Place stickers on each corner of the dispenser and across the top. Carefully position the dispenser flush to the top of the backplate and press firmly to secure.